

PASSENGER CABLE STYLE TIRE CHAIN



1. DRAPE CABLE OVER TIRE

after laying cable flat by tire and inspecting it for any kinks. Set cable etched TIRE SIDE (1A) against the tire wall. Place the keyhole latch (1B) toward the front of the tire, and beaded cable ends (1C) toward the back of the tire.

**SPEED
LIMIT
WITH
CHAINS
30**


2. POSITION CABLE

to be centered on tire treads. Straighten cross cables to lay horizontal across tire treads. Tuck first cross cable under the front of your tire in preparation to roll over them.

3. DRIVE VEHICLE FORWARD

over cable until beaded cable ends are positioned midway on the tire and keyhole latch (3A) is easily accessible.

4. ATTACH CABLE

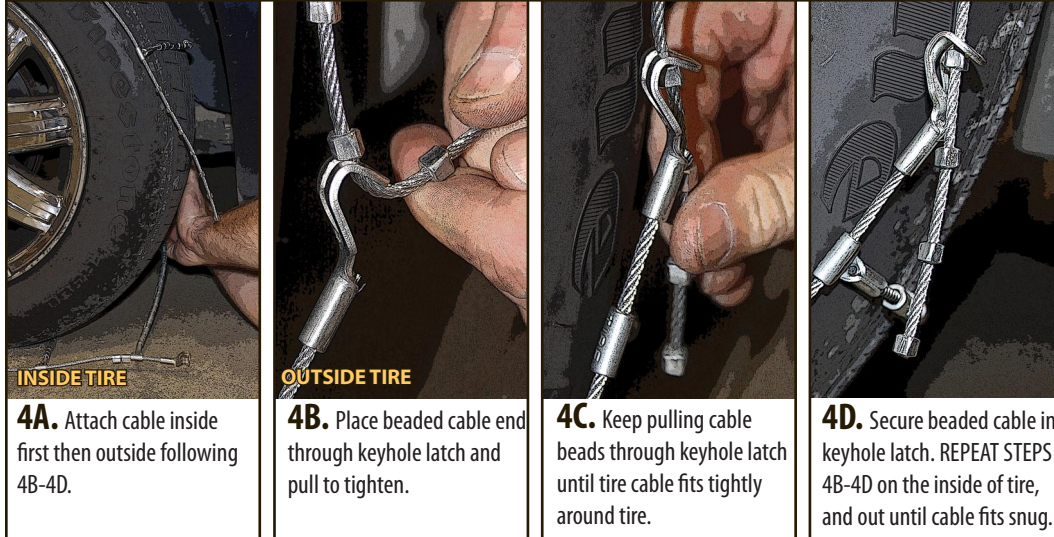

INSIDE TIRE

4A. Attach cable inside first then outside following 4B-4D.

OUTSIDE TIRE

4B. Place beaded cable end through keyhole latch and pull to tighten.

4C. Keep pulling cable beads through keyhole latch until tire cable fits tightly around tire.

4D. Secure beaded cable in keyhole latch. REPEAT STEPS 4B-4D on the inside of tire, and out until cable fits snug.



**INTERNATIONAL
CHAIN AND CABLE**




6. ADD CHAIN ADJUSTERS

for a more secure fit and to extend the life of your chains.



5. TEST DRIVE VEHICLE INSPECT & RE-TIGHTEN

tire cables so they fit snug around the tire. REPEAT STEPS 4B-4D. Snap hanging beaded cable ends into the two clips on the side cable (5A).

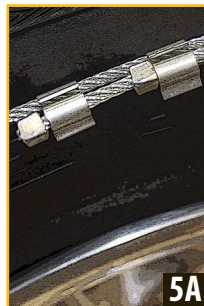

5A